PREMIER®

MANUAL DE INSTRUCCIONES
CONGELADOR (TIPO BAÚL)
CG-4974

Design-ADVANCE

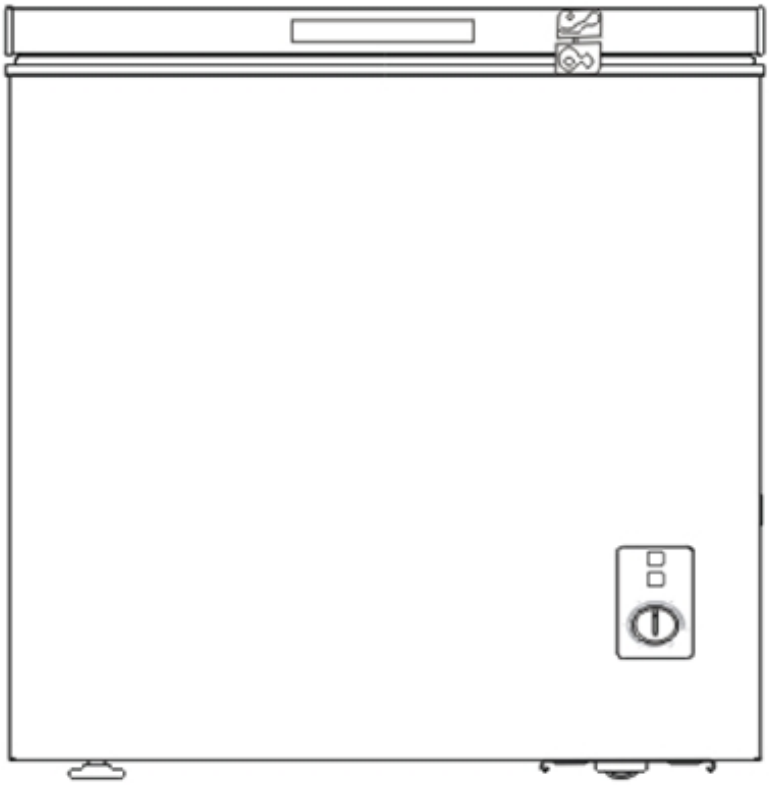

ESTIMADO CLIENTE
Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

DESCRIPCIÓN 2
INSTRUCCIONES DE TRANSPORTE 2
RECOMENDACIONES 3
INSTRUCCIONES DE INSTALACIÓN 3
ANTES DE COMENZAR 4
OPERACIÓN DEL CONGELADOR 4
LIMPIEZA Y MANTENIMIENTO 6
DIAGRAMA DE CIRCUITOS 8

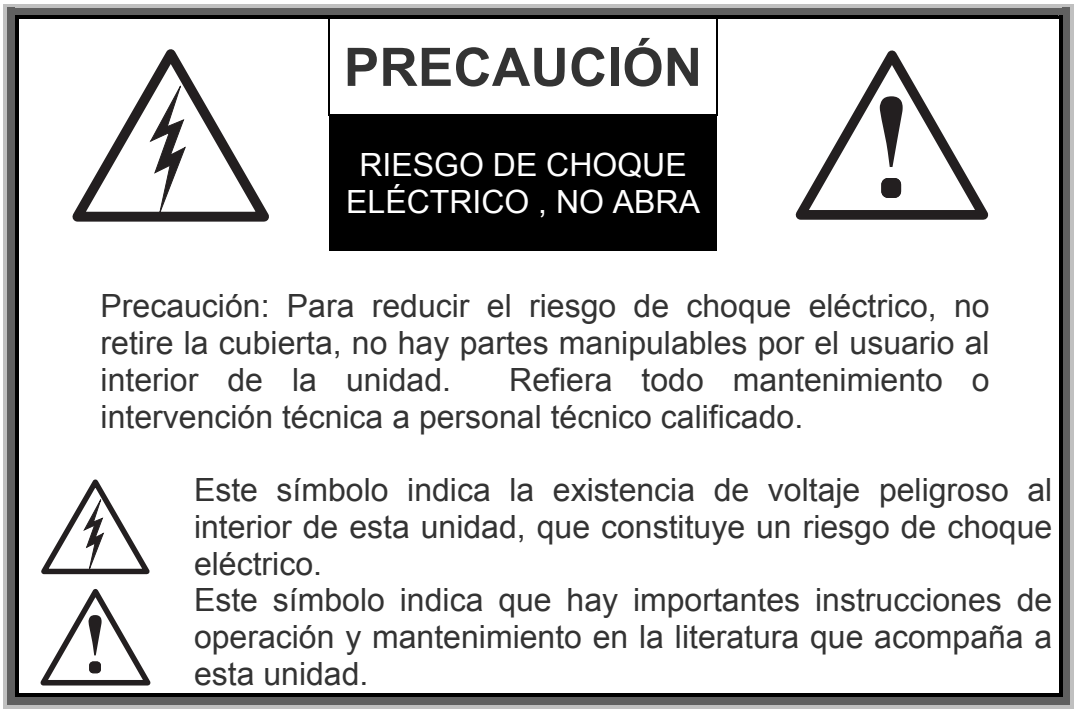
PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

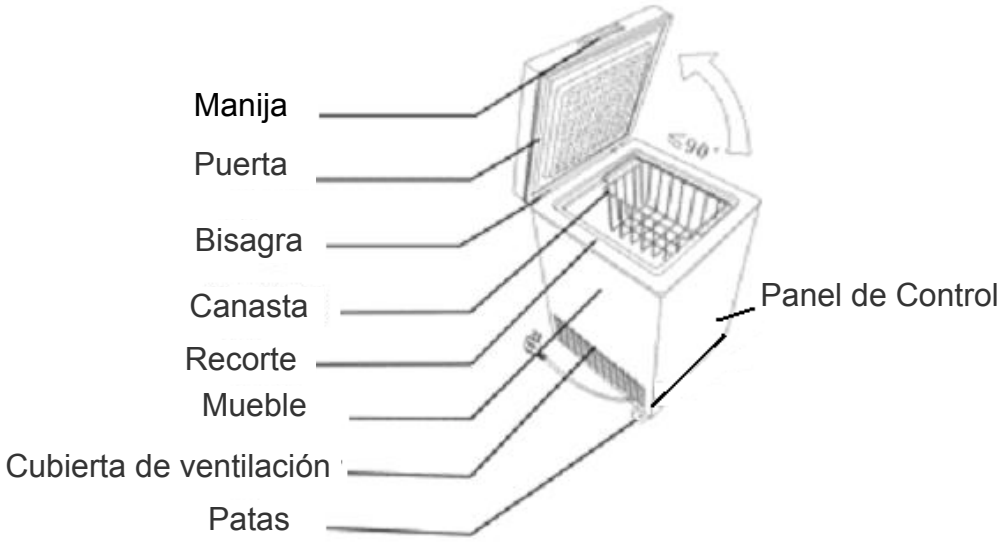

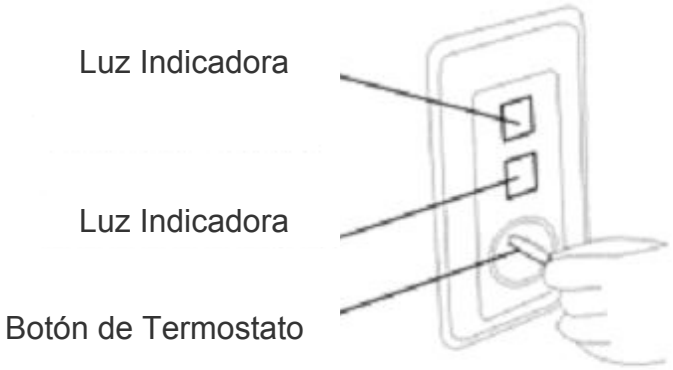

ADVERTENCIA

- No toque el interior del congelador de los alimentos congelados con las manos mojadas para evitar quemarse con escarcha.
- Mantenga la unidad fuera del alcance de los niños.

INSTRUCCIONES DE TRANSPORTE

La unidad debe ser transportada únicamente en posición vertical. El empaque que se suministra debe estar intacto durante el transporte. Si en el período de transporte el producto ha sido transportado horizontalmente, debe apoyarse sobre el lado izquierdo (mirando de frente a la puerta) y se debe dejar reposar al menos 4 horas en dicha posición para permitir que el sistema se acople y pueda colocarse luego en la posición vertical.

Es importante cumplir con estas instrucciones con el fin de evitar daños a la unidad. La unidad debe ser protegida contra la lluvia, la humedad y otras influencias atmosféricas.

RECOMENDACIONES

- Se debe tener precaución a limpiar o mover la unidad para evitar tocar los cables metálicos del condensador en la parte posterior de la unidad, con el fin de proteger los dedos y las manos.
- La unidad no está diseñada para servir de base y colocar productos encima de ella. No coloque objetos pesados ni apile cajas otras cosas sobre ella.
- Asegúrese de que el cable de poder está libre y no enredado con la unidad.
- Al colocar la unidad asegúrese de no dañar el suelo, los tubos, pintura o papel de colgadura, etc. del lugar donde la ubique.
- No mueva la unidad halando la tapa o la manija.
- No permita que los niños jueguen con la unidad ni con los controles.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

INSTRUCCIONES DE INSTALACIÓN

1. Coloque la unidad lejos de fuentes de calor como estufas, radiadores o los rayos directos del sol ya que esto causará que el compresor trabaje por períodos de tiempo prolongados. Si se coloca cerca de una fuente de calor o un refrigerador, mantenga al menos los siguientes espacios libres:

   Desde una estufa: 1 metro
   Desde un radiador: 3 metros
   Desde un refrigerador: 1 metro

2. Asegúrese de que hay suficiente espacio alrededor de la unidad para la circulación libre del aire. Idealmente, se deben dejar al menos 10 cm libres alrededor de la unidad como se muestra en el dibujo.

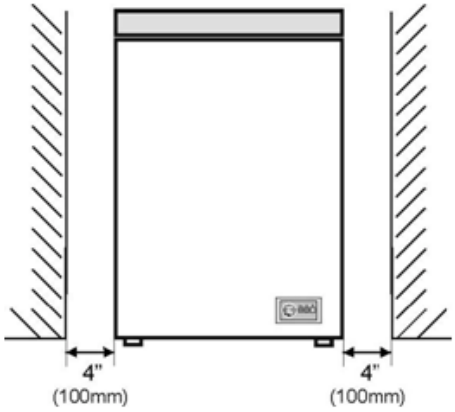

3. La unidad debe ser colocada sobre una superficie suave pero firme.
4. No utilice la unidad en exteriores.
5. Proteja el congelador de la humedad. No lo coloque en espacios húmedos para evitar que las partes metálicas y occidente. Tampoco salpique agua sobre el congelador con el fin de mantener el aislamiento y que no haya pérdidas de energía.
6. Si el congelador se instala en lugares fríos, es probable que se forme una capa de humedad en la parte exterior. Esto es normal y no constituye ningún daño. Solo debe pasar un trapo para limpiar esta condensación.

ANTES DE COMENZAR

Verifique lo siguiente antes de comenzar a utilizar el congelador:

1. El compartimiento interior está seco y el aire puede circular libremente en la parte posterior.
2. Limpie el compartimiento interior como se recomienda en la sección sobre limpieza y mantenimiento.
3. Conecte el cable de poder en el tomacorriente. La luz indicadora roja se encenderá. Luego la luz verde se encenderá y el compresor comenzará a funcionar.
4. Escuchará el ruido de compresor cuando se inicia. Los líquidos y los gases sellados en el interior del sistema de congelamiento pueden aumentar este ruido. Estos ruidos son completamente normales y no constituyen ningún daño.
5. Si va a almacenar alimentos congelados abra la tapa del congelador y asegúrese que ha alcanzado la temperatura correcta.
6. No llene de alimentos el congelador inmediatamente después de haberlo prendido. Permita que congelador llega a temperatura adecuada. Recomendamos utilizar un termómetro para esto.

IMPORTANTE

- Si se presenta una falla eléctrica no abra la tapa. Los alimentos congelados no se afectarán si la falla eléctrica dura menos de 20 horas. Si el periodo de la falla eléctricas más largo, entonces se deben consumir los alimentos tan pronto como sea posible o cocinarlos y volverlos a congelar.
- Si observa que la tapa del congelador es difícil de abrir justo después de haberla cerrado, no se preocupe. Esto puede suceder debido a la diferencia de presión, y luego de unos minutos podrá abrirla anormalmente.

OPERACIÓN DEL CONGELADOR

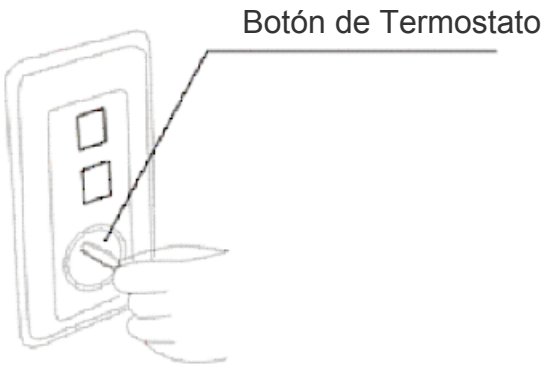

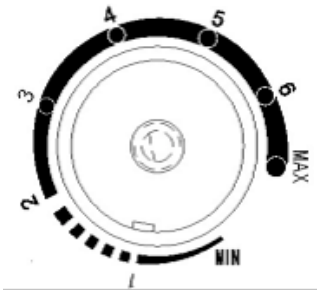

La temperatura interna del congelador se regula por medio del botón de termostato. Las marcas 1, 2, 3, 4, 5 y 6 en el botón no representan la temperatura, sino que representan una temperatura menor o mayor. Cuanto menor sea el número, mayor es la temperatura (menos frío). Cuanto mayor sea el número, menor es la temperatura (más frío).

Min, 2	=	5ºC a -10ºC
2,6	=	-10ºC a -26ºC
6, máx.	=	-26ºC a -32ºC
Máx.	=	por debajo de -34ºC

Debido a la diferencia entre las condiciones atmosféricas y el medio ambiente, cuando utilice congelador es probable que la temperatura interna no coincida necesariamente con la información anterior.

Congelamiento Rápido
Por debajo de -18ºC. Al colocar el botón en esta función, mantenga el compresor operando continuamente sin detenerse con el fin de que los alimentos sean rápidamente congelados. (Recuerde no mantener el botón en esta posición después de terminar el proceso de congelamiento rápido).

Modo de Refrigeración
Cuando haga un cambio en el modo de refrigeración, saque los alimentos que sean necesarios con el fin de que no se han congelados si no deben estarlo. Si desea cambiar del modo de congelación al modo de refrigeración, tenga en cuenta lo siguiente: coloque el botón del termostato en el modo de refrigeración y retire los alimentos congelados del compartimiento de congelamiento. Manténgalo vacío por una hora y luego coloque los alimentos que requiera.

Guardar Alimentos Congelados
Los alimentos congelados comercialmente disponibles deben ser almacenados de acuerdo con la destrucción del fabricante. En general, de tener en cuenta lo siguiente:

- Coloque los alimentos en el congelador tan pronto como sea posible después de comprarlos.
- No consuma los alimentos antes de la fecha de vencimiento establecida por el fabricante.

Congelar Alimentos Frescos
- Coloque los alimentos frescos que hace congelados cerca de las paredes del congelador para asegurar un rápido congelamiento y lejos de los alimentos que ya están congelados, si es posible. La capacidad de congelamiento de la unidad en un período de 24 horas es de 5 kg (10 libras).
- No exceda la capacidad máxima de congelador. Tampoco congele demasiadas cosas en una sola vez.
- La calidad de los alimentos se conserva mejor cuando los congela adecuadamente.
- Tenga especial cuidado en no mezclar alimentos congelados con comida fresca.

Descongelamiento
Descongele la unidad al menos una vez al año cuando la capa de condensación que se forma sea de aproximadamente 7 mm. De forma alternativa, puede apagar el congelador desconectar el cable de poder.

Coloque un contenedor y retire el tapón del agua para extraerla. 6 horas antes de iniciar el proceso descongelamiento, coloque el botón del termostato en la posición máxima para asegurar que los alimentos queden con la menor temperatura.

Cuando retire los alimentos, envuélvalos en varias capas de papel periódico y guárdelos en un lugar fresco (por ejemplo otra nevera una despensa).

Retire la canasta de congelador y abierta la puerta.

Se pueden colocar contenedores de agua tibia en el interior de la unidad para acelerar el descongelamiento. No utilice secadores de cabello o dispositivos eléctricos que generen calor para el proceso descongelamiento.

Una vez terminada el descongelamiento retire el agua que se almacena en la parte inferior, quitando el tapón del agua. Seque por completo la unidad en la parte interior.

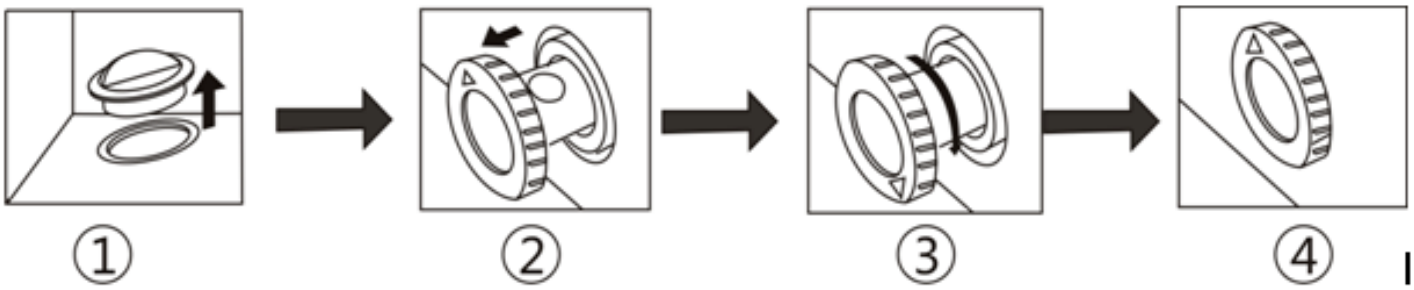

Coloque el botón del temporizador en la posición de congelamiento rápido y déjelo por 3 horas.

Nota
No utilice objetos puntiagudos tales como cuchillos contenedores para retirar la escarcha ni dispositivos eléctricos que generen calor para retirar la escarcha.

LIMPIEZA Y MANTENIMIENTO

- Desconecte el cable de poder antes de iniciar la limpieza.
- No utilice líquidos abrasivos como jabón, detergentes o limpiadores.
- No utilice objetos puntiagudos.
- Utilice agua tibia para limpiar el mueble del congelador.
- Utilice una prenda humedecida con una solución de bicarbonato de sodio (una cucharadita) y medio litro de agua para limpiar el interior del congelador.
- El exceso de depósito de hielo debe ser removido regularmente utilizando un raspador, el cual puede conseguir en una tienda local. Las grandes cantidades de hielo acumuladas pueden impedir el desempeño del congelador.
- Si el congelador no va a ser utilizado por un periodo de tiempo prolongado, desconecte el cable de poder, retire todos los alimentos, límpielo y deje la puerta un poco abierta para la ventilación del aire.
- Verifique los sellamiento de la puerta regularmente para asegurarse de que están limpios y libres de partículas de alimentos.
- Recuerde no lavar el compresor con agua. Sólo pase un trapo para limpiar el polvo.

COSAS QUE SE DEBEN HACER

- Descongelar los alimentos del congelador completamente en una nevera o en un horno microondas siguiendo las instrucciones de descongelamiento de cocción.
- Asegurarse de que la tapa del congelador está totalmente cerrada después de cada uso.
- Descongelar la carne completamente antes de cocinarla.
- Cerrar la tapa suavemente.
- Verificar el contenido de congelador regularmente.

- Limpiar y descongelar el congelador regularmente.
- Mantener los alimentos por un corto periodo de tiempo en el congelador, según sea posible, y consumirlos antes de la fecha de vencimiento.
- Guardar alimentos congelados disponibles en el mercado de acuerdo con las instrucciones dadas por el fabricante.
- Elegir alimentos frescos y de alta calidad y asegurarse de que están completamente limpios antes de congelarlos.
- Disponer los alimentos frescos en porciones pequeñas para asegurar el congelamiento rápido.
- Envolver todos los alimentos en aluminio o bolsas de plástico de calidad y asegurarse que no hay aire.
- Envolver los alimentos congelados que compre y ponerlos en el congelador tan pronto como sea posible.
- Guardar los alimentos pequeños en la canasta.
- Sacar el helado de congelador de 10 a 20 minutos antes de servir.

COSAS QUE NO SE DEBEN HACER

- Dejar la puerta abierta por largos periodos de tiempo, ya que esto hará que el congelador gaste más energía y causa formación excesiva de hielo.
- Utilizar objetos puntiagudos como cuchillos o tenedores para retirar el hielo.
- Colocar alimentos calientes en el congelador; permita que se enfríe primero.
- Colocar botellas o latas que contengan líquidos carbonatados en el congelador, ya que éstos pueden explotar.
- Guardar sustancias peligrosas o venenosas en el congelador. Este ha sido diseñado únicamente para alimentos.
- Exceder la capacidad máxima de congelamiento de 5 kg en 24 horas.
- Consumir helado o hielo directamente del congelador ya que la baja temperatura puede quemar sus labios.
- No congelar bebidas burbujeantes.
- No mantener alimentos que ya sean descongelados. Deben consumirse dentro de 24 horas o cocinarse y volverse congelar.
- Retirar alimentos del congelador con las manos mojadas.
- Cerrar la puerta con fuerza.

DIAGRAMA DE CIRCUITOS

Voltaje AC115/60Hz
Potencia 130W
Capacidad 200L / 7.11 pies cúbicos

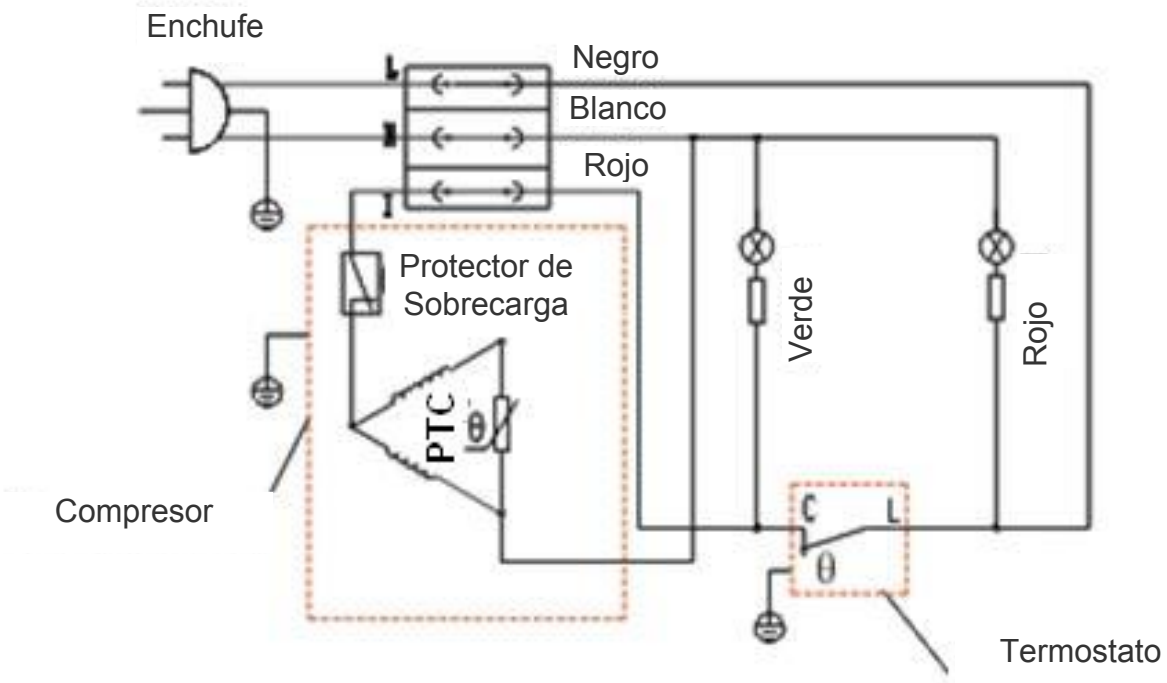

INSTRUCTION MANUAL
FREEZER (CHEST TYPE)
CG-4974

Design-ADVANCE

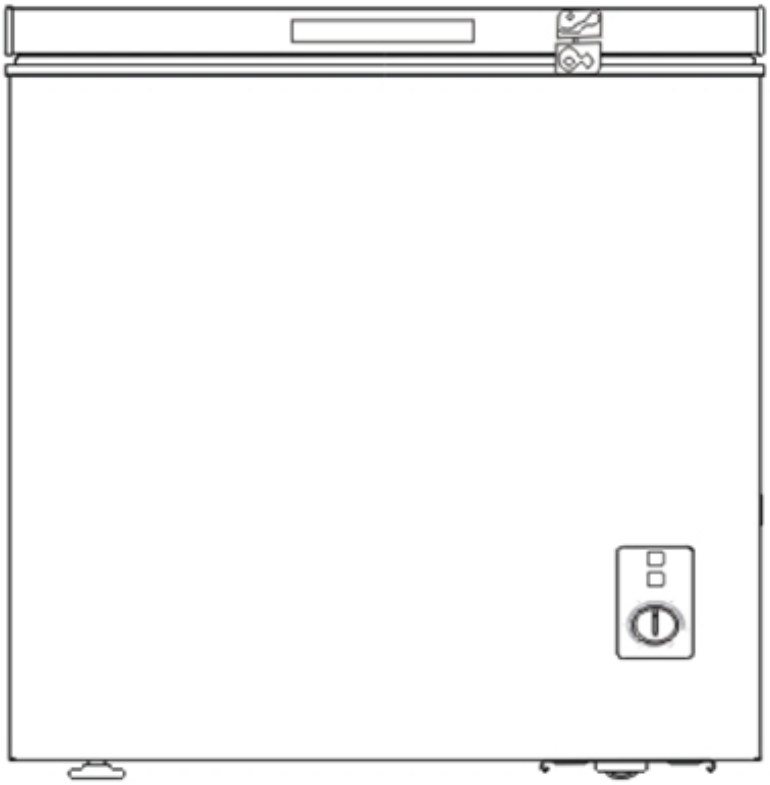

DEAR CUSTOMER
In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

NAMES OF THE PARTS

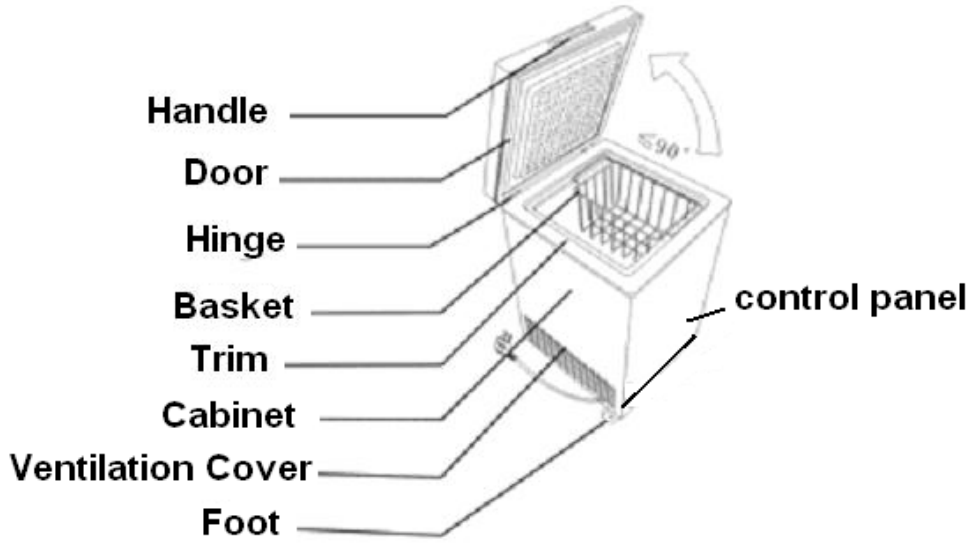

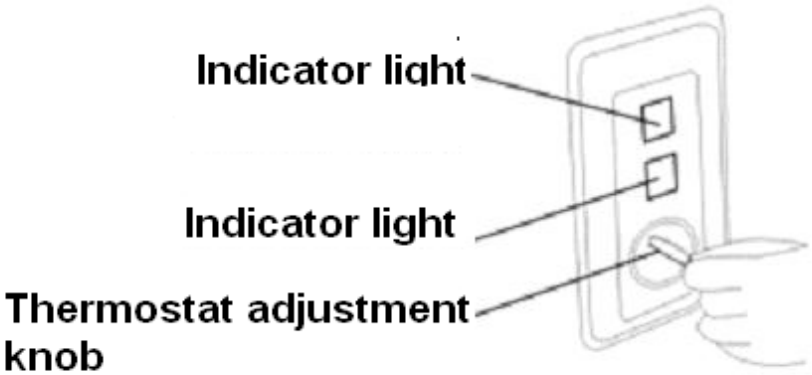

⚡ WARNING ⚡:

NEVER TOUCH THE INTERIOR OF THE FREEZER CHAMBER OR FROZEN FOODS IN THE COMPARTMENT WITH WET HANDS AS THIS COULD RESULT IN FROST BITE.

KEEP THE KEY OUT OF REACH OF CHILDREN AND NOT IN THE VICINITY OF THE FREEZER.

TRANSPORTATION INSTRUCTIONS

THE APPLIANCE SHOULD BE TRANSPORTED ONLY IN A VERTICAL UPRIGHT POSITION. THE PACKING AS SUPPLIED MUST BE INTACT DURING TRANSPORTATION.

IF DURING THE COURSE OF TRANSPORT THE PRODUCT HAS BEEN TRANSPORTED HORIZONTALLY, IT MUST ONLY BE LAID ON ITS LEFT HAND SIDE (WHEN FACING THE DOOR FRONT) AND IT MUST NOT BE OPERATED FOR AT LEAST 4 HOURS TO ALLOW THE SYSTEM TO SETTLE AFTER THE APPLIANCE IS BROUGHT BACK TO UPRIGHT POSITION.

1. FAILURE TO COMPLY WITH THE ABOVE INSTRUCTIONS COULD RESULT IN DAMAGE OCCURING TO THE APPLIANCE. THE MANUFACTURER WILL NOT BE HELD RESPONSIBLE IF THESE INSTRUCTIONS ARE DISREGARDED.
2. THE APPLIANCE MUST BE PROTECTED AGAINST RAIN, MOISTURE AND OTHER ATMOSPHERIC INFLUENCES.

IMPORTANT : CARE MUST BE TAKEN WHILE CLEANING / CARRYING THE APPLIANCE TO AVOID TOUCHING THE CONDENSER METAL WIRES AT THE BACK OF THE APPLIANCE, AS YOU MIGHT INJURE YOUR FINGERS AND HANDS OR DAMAGE YOUR PRODUCT.

IMPORTANT : THIS APPLIANCE IS NOT DESIGNED FOR STACKING WITH ANY OTHER APPLIANCE. DO NOT ATTEMPT TO SIT OR STAND ON TOP OF YOUR APPLIANCE AS IT IS NOT DESIGNED FOR SUCH USE. YOU COULD INJURE YOURSELF OR DAMAGE THE APPLIANCE

.

IMPORTANT : MAKE SURE THAT MAINS CABLE IS NOT CAUGHT UNDER THE APPLIANCE DURING AND AFTER CARRYING / MOVING THE APPLIANCE, TO AVOID THE MAINS CABLE BECOMING CUT OR DAMAGED.”

WHEN POSITIONING YOUR APPLIANCE TAKE CARE NOT TO DAMAGE YOUR FLOORING, PIPES, WALL COVERINGS ETC. DO NOT MOVE THE APPLIANCE BY PULLING BY THE LID OR HANDLE. DO NOT ALLOW CHILDREN TO PLAY WITH THE APPLIANCE OR TAMPER WITH THE CONTROLS. OUR COMPANY DECLINES TO ACCEPT ANY LIABILITY SHOULD THE INSTRUCTIONS NOT BE FOLLOWED.

INSTALLATION INSTRUCTIONS

1. IF POSSIBLE AVOID PLACING THE APPLIANCE NEAR COOKERS, RADIATORS OR IN DIRECT SUNLIGHT AS THIS WILL CAUSE THE COMPRESSOR TO RUN FOR LONG PERIODS. IF INSTALLED NEXT TO A SOURCE OF HEAT OR REFRIGERATOR, MAINTAIN THE FOLLOWING MINIMUM SIDE CLEARANCES:

FROM COOKERS	4" (100 MM)
FROM RADIATORS	12" (300 MM)
FROM FRIDGES	4" (100 MM)

2. MAKE SURE THAT SUFFICIENT ROOM IS PROVIDED AROUND THE APPLIANCE TO ENSURE FREE AIR CIRCULATION. IDEALLY, A SPACE OF NO LESS THAN 10CM MUST BE LEFT AROUND THE FREEZER, AND ENSURE YOU ALLOW GAPS AS SHOWN IN THE BELOW DIAGRAM.

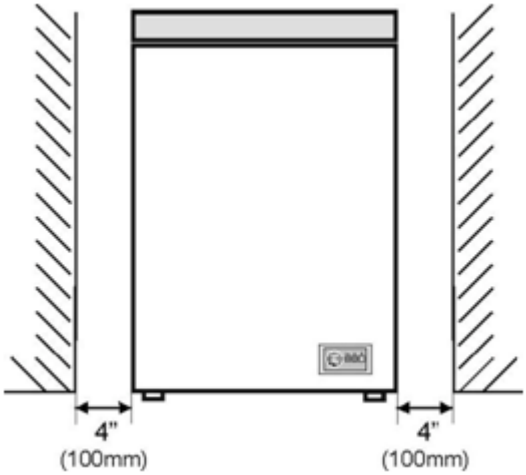

3. THE APPLIANCE SHOULD BE LOCATED ON A SMOOTH SURFACE.
4. IT IS FORBIDDEN TO USE THE REFRIGERATOR OUTDOORS.
5. PROTECTION FROM MOISTURE. DO NOT LOCATE THE FREEZER IN MOIST SPACE TO AVOID THE METAL PARTS RUSTY. AND DO NOT SPRAY WATER TO THE FREEZER, OTHERWISE IT WILL WEAKEN THE INSULATION AND CAUSES CURRENT LEAKAGE.
6. REFER TO "CLEANING AND CARE" SECTION TO PREPARE YOUR APPLIANCE FOR USE.
7. IF THE FREEZER IS INSTALLED IN UNHEATED AREAS, GARAGES ETC., IN COLD WEATHER CONDENSATION MAY FORM ON THE OUTER SURFACES. THIS IS QUITE NORMAL AND IS NOT A FAULT. REMOVE THE CONDENSATION BY WIPING WITH A DRY CLOTH.

STARTING

FINAL CHECK
BEFORE YOU STARTING TO USE THE FREEZER, PLEASE CHECK THAT:

1. THE INTERIOR IS DRY AND AIR CAN CIRCULATE FREELY AT THE REAR.
2. CLEAN THE INTERIOR AS RECOMMENDED UNDER "CLEANING AND CARE".
3. INSERT THE PLUG INTO THE WALL SOCKET AND SWITCH ON THE ELECTRICITY SUPPLY，THEN THE RED LIGHT IS ON. AVOID ACCIDENTAL DISCONNECTION BY TAPING OVER THE SWITCH. GREEN LIGHT WILL GLOW AND THE COMPRESSOR WILL START RUNNING (SEE FREEZER OPERATION PAGE 7).
4. YOU WILL HEAR A NOISE AS THE COMPRESSOR STARTS UP. THE LIQUID AND GASES SEALED WITHIN THE REFRIGERATION SYSTEM MAY ALSO GIVE RISE TO NOISE, WHETHER THE COMPRESSOR IS RUNNING OR NOT WHICH IS QUITE NORMAL.
5. IF YOU GOING TO STORE ALREADY FROZEN FOOD OPEN THE FREEZER LID AND CHECK THAT THE FREEZER HAS REACHED THE CORRECT TEMPERATURE. THEN YOU CAN PUT IN YOUR ALREADY FROZEN FOOD. (SEE STORING FROZEN FOOD PAGE 8).
6. DO NOT LOAD THE APPLIANCE IMMEDIATELY AFTER IT IS SWITCHED ON. WAIT UNTIL THE CORRECT STORAGE TEMPERATURE HAS BEEN REACHED. WE RECOMMEND THAT YOU CHECK THE TEMPERATURE WITH AN ACCURATE THERMOMETER (SEE FREEZER OPERATION PAGE 7).

IMPORTANT NOTES:

• IF THERE IS A POWER FAILURE DO NOT OPEN THE LID. FROZEN FOOD SHOULD NOT BE AFFECTED IF THE FAILURE LASTS FOR LESS THAN 20 HOURS. IF THE FAILURE IS LONGER, THEN THE FOOD SHOULD BE CHECKED AND EATEN IMMEDIATELY OR COOKED AND THEN REFROZEN.
• IF YOU FIND THAT THE LID OF THE CHEST FREEZER IS DIFFICULT TO OPEN JUST AFTER YOU HAVE CLOSED IT, DON’T WORRY. THIS IS DUE TO THE PRESSURE DIFFERENCE WHICH WILL EQUALIZE AND ALLOW THE LID TO BE OPENED NORMALLY AFTER A FEW MINUTES.

FREEZER OPERATION

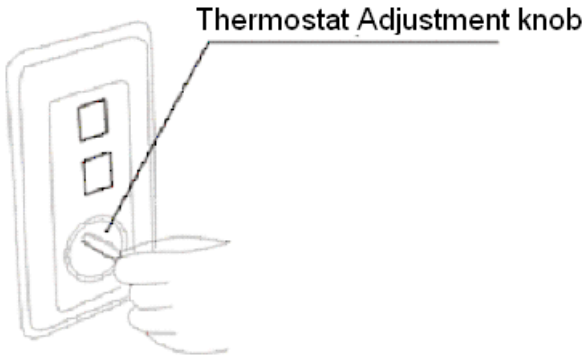

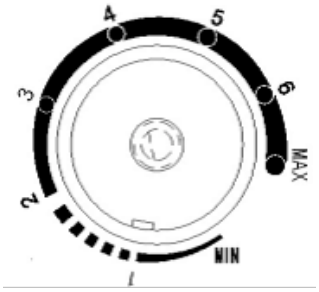

THE INSIDE TEMPERATURE OF FREEZER IS REGULATED BY THERMOSTAT ADJUSTMENT KNOB.

“1,2,3,4,5,6” MARKS ON THE KNOB DO NOT REPRESENT THE EXACT TEMPERATURE, BUT SHOW THAT THE SMALLER NUMBER REPRESENT THE HIGHER THE TEMPERATURE, CONVERSELY, THE BIGGER NUMBER, THE LOWER THE TEMPERATURE.

THE FOLLOWING FIGURE ILLUSTRATES INFORMATION AS BELOW:

MIN - 2— REFRIGERATING RANGE (5— -10□)

2 - 6—SOFT FREEZING RANGE (-10— -26□)

6 - MAX—SOFT FREEZING RANGE (-26— -32□)

MAX—FAST FREEZING RANGE （BELOW -34□ ）

DUE TO THE DIFFERENCE OF THE CONDITION AND ENVIRONMENT WHEN FREEZERS ARE USED, IT IS PROBABLE THAT THE INSIDE TEMPERATURE OF YOUR FREEZER DO NOT ACCORD WITH ABOVE DATA.

FAST FREEZING (BELOW -18□ : WHILE SET THE KNOB TO FAST FREEZING RANGE, PLEASE KEEP THE COMPRESSOR CONTINUOUS OPERATING WITHOUT STOPPING, THE FOOD CAN BE QUICKLY COOLED.

CAUTION: DO NOT KEEP THE KNOB ON THE FAST FREEZING POSITION AFTER FAST FREEZING

REFRIGERATING MODE:

WHEN CHANGE THE REFRIGERATING STATUS TO OTHERS, YOU SHOULD TAKE OUT FOOD TO AVOID THEM BEING FROSTED DAMAGED. IF SHIFT FREEZING OR SOFT FREEZING SATUS TO REFRIGERATING MODE, YOU SHOULD TAKE THE FOLLOWING STEPS:

SET THE KNOB OF THERMOSTAT TO REFRIGERATION MODE, THEN REMOVE ALL OF FROZEN FOOD FROM FREEZE COMPARTMENT, THEN KEEP IT BEING EMPTY FOR ONE HOUR, AND FINALLY PUT THE REQUIRED FOOD INTO IT.

STORING FROZEN FOOD

PREPACKAGED COMMERCIALLY FROZEN FOOD SHOULD BE STORED IN ACCORDANCE WITH THE FROZEN FOOD MANUFACTURER'S INSTRUCTIONS FOR A **** FREEZER COMPARTMENT.
TO ENSURE THAT THE HIGH QUALITY ACHIEVED BY THE FROZEN FOOD MANUFACTURER AND THE FOOD RETAILER IS MAINTAINED THE FOLLOWING SHOULD BE REMEMBERED:

1 . PUT PACKETS IN THE FREEZER AS QUICKLY AS POSSIBLE AFTER PURCHASE.

2 . DO NOT EXCEED "USE BY", "BEST BEFORE" DATES ON THE PACKAGING.

FREEZING FRESH FOOD

PLACE FRESH FOOD TO BE FROZEN NEAR THE SIDE WALLS TO ENSURE FAST FREEZING AND AWAY FROM ALREADY FROZEN FOOD, IF POSSIBLE.
FREEZING CAPACITY OF YOUR APPLIANCE IN A 24 HOURS PERIOD IS 5 KG (10LB).
NEVER EXCEED THIS MAXIMUM CAPACITY. DO NOT FREEZE TOO LARGE A QUANTITY AT ANY ONE TIME.
THE QUALITY OF THE FOOD IS BEST PRESERVED WHEN IT IS FROZEN RIGHT THROUGH TO THE CENTRE AS QUICKLY AS POSSIBLE.
TAKE SPECIAL CARE NOT TO MIX ALREADY FROZEN FOOD AND FRESH FOOD.

DEFROSTING

DEFROST TWICE A YEAR OR WHEN A FROST LAYER OF AROUND 7 MM (1/4") HAS FORMED.
ALTERNATIVELY YOU MAY SWITCH OFF THE FREEZER AT THE SOCKET OUTLET AND PULL OUT THE MAINS PLUG.
EXTRACT THE WATER CONDUIT AND PUT IN A WATER CONTAINER.
6 HOURS BEFORE THE DEFROSTING, PLEASE SET THE THERMOSTAT KNOB AT "MAX" POSITION TO MAKE SURE THE FOOD IS AT THE LOWEST TEMPERATURE WHEN YOU GET IT OUT. ALL FOOD SHOULD BE WRAPPED IN SEVERAL LAYERS OF NEWSPAPER AND STORED IN A COOL PLACE (E.G. FRIDGE OR LARDER).
REMOVE THE FREEZER BASKET. LEAVE THE LID OPEN. CONTAINERS OF WARM

WATER MAY BE PLACED CAREFULLY IN THE FREEZER TO SPEED UP THE DEFROSTING.
NEVER USE HAIRDRYERS, ELECTRICAL HEATERS OR OTHER SUCH ELECTRICAL APPLIANCES FOR DEFROSTING. WHEN DEFROSTING HAS FINISHED FLOW OUT DEFROST WATER WHICH COLLECTS AT THE BOTTOM OF THE FREEZER AS THE BELOW DIAGRAM AND DRY THE INTERIOR THOROUGHLY. SWITCH ON THE FAST FREEZE AND LEAVE IT ON FOR ABOUT THREE HOURS.

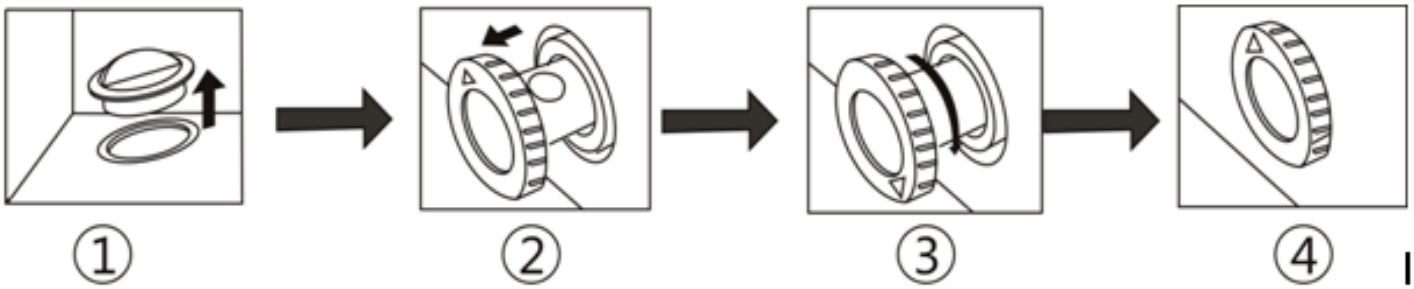

1. THERE IS A WATER CONDUIT AT THE BOTTOM OF THE FREEZER, WHEN DEFROSTING, EXTRACT THE RUBBER COVER, DEFROSTED WATER WILL DRIP INTO THE HOLE AND FLOW OUT. (NOTES: PLEASE KEEP THE RUBBER COVER WELL DURING THE DEFROSTING AND PUT IT BACK AFTER DEFROSTING IS DONE)
2. EXTRACT THE WATER CONDUIT BY 20-25MM UNTIL THE WATER HOLE CAN BE SEEN.
3. TWIST THE WATER CONDUIT UNTIL THE ARROW POINTS DOWNWARD.
4. AFTER DEFROSTING IS DONE, MAKE SURE THERE IS NO MORE WATER COMING OUT BEFORE OUT THE WATER CONDUIT IN PLACE AND MAKE THE ARROW POINT UPWARD.

IMPORTANT NOTES:
• DO NOT USE POINTED OR SHARP-EDGED OBJECTS SUCH AS KNIVES OR FORKS TO REMOVE THE FROST.
• NEVER USE HAIRDRYERS, ELECTRICAL HEATERS OR OTHER SUCH ELECTRICAL APPLIANCES FOR DEFROSTING.

CLEANING AND CARE

** WE RECOMMEND THAT YOU SWITCH OFF THE FREEZER AT THE SOCKET OUTLET AND PULL OUT THE MAINS PLUG BEFORE CLEANING.
** NEVER USE ANY SHARP ABRASIVE INSTRUMENT, SOAP, HOUSEHOLD CLEANER, DETERGENT AND WAX POLISH FOR CLEANING.
** USE LUKEWARM WATER TO CLEAN THE CABINET OF THE FREEZER AND WIPE

IT DRY.
** USE A DAMP CLOTH WRUNG OUT IN A SOLUTION OF ONE TEASPOON OF BICARBONATE OF SODA TO ONE PINT OF WATER TO CLEAN THE INTERIOR AND WIPE IT DRY.
** EXCESS DEPOSIT OF ICE SHOULD BE REMOVED ON A REGULAR BASIS USING A PLASTIC ICE SCRAPER AVAILABLE FROM YOUR LOCAL STORE. LARGE ACCUMULATION OF ICE WILL IMPAIR THE PERFORMANCE OF THE FREEZER.
** IF THE FREEZER IS NOT GOING TO BE USED FOR A LONG PERIOD OF TIME SWITCH IT OFF, REMOVE ALL FOOD, CLEAN IT AND LEAVE THE LID AJAR.
** CHECK LID SEALS REGULARLY TO ENSURE THEY ARE CLEAN AND FREE FROM FOOD PARTICLES.

IMPORTANT NOTES:
NEVER USE WATER WASH THE COMPRESSOR POSITION, WIPE IT WITH A DRY CLOTH THOROUGHLY AFTER CLEANING TO PREVENT RUST.

DO'S AND DON'TS

DO – DEFROST FOOD FROM THE FREEZER THOROUGHLY IN A FRIDGE OR IN A MICROWAVE OVEN FOLLOWING DEFROSTING AND COOKING INSTRUCTIONS.
DO – ENSURE THAT CHEST FREEZER LID IS COMPLETELY CLOSED AFTER EACH USE.
DO – DEFROST FROZEN MEAT COMPLETELY BEFORE COOKING.
DO – CLOSE THE LID GENTLY.
DO – CHECK CONTENTS OF THE FREEZER AT REGULAR INTERVALS.
DO – CLEAN AND DEFROST YOUR FREEZER REGULARLY (SEE "DEFROSTING")
DO – KEEP FOOD FOR AS SHORT A TIME AS POSSIBLE AND ADHERE TO "BEST BEFORE", "USE BY" DATES.
DO – STORE COMMERCIALLY FROZEN FOOD IN ACCORDANCE WITH THE INSTRUCTIONS GIVEN ON THE PACKETS THAT YOU BUY.
DO – ALWAYS CHOOSE HIGH QUALITY FRESH FOOD AND BE SURE IT IS THOROUGHLY CLEAN BEFORE YOU FREEZE IT.
DO – PREPARE FRESH FOOD FOR FREEZING IN SMALL PORTIONS TO ENSURE RAPID FREEZING.
DO – WRAP ALL FOODS IN ALUMINUM FOIL OR FREEZER QUALITY PLASTIC BAGS AND MAKE SURE ANY AIR IS EXCLUDED.
DO – WRAP FROZEN FOOD WHEN YOU BUY IT AND PUT IT IN TO THE FREEZER AS SOON AS POSSIBLE.
DO – STORE SMALL ITEMS IN THE BASKET PROVIDED.
DO – REMOVE ICE CREAM FROM THE FREEZER 10-20 MINUTES BEFORE SERVING.

DON'T – LEAVE THE LID OPEN FOR LONG PERIODS AS THIS WILL MAKE THE FREEZER MORE COSTLY TO RUN AND CAUSE EXCESSIVE ICE FORMATION.
DON'T – USE POINTED SHARP EDGED OBJECTS SUCH AS KNIVES, FORKS TO REMOVE THE ICE.
DON'T – PUT HOT FOOD IN THE FREEZER. LET IT COOL DOWN FIRST.
DON'T – PUT LIQUID-FILLED BOTTLES OR SEALED CANS CONTAINING CARBONATED LIQUIDS INTO THE FREEZER AS THEY MAY BURST.
DON'T – STORE POISONOUS OR DANGEROUS SUBSTANCES IN THE FREEZER. YOUR FREEZER HAS BEEN DESIGNED FOR THE STORAGE OF EDIBLE FOODSTUFFS ONLY.
DON'T – EXCEED THE MAXIMUM FREEZING CAPACITY (5 KG IN ANY 24 HOURS) WHEN FREEZING FRESH FOOD.
DON'T – CONSUME ICE-CREAM AND WATER ICES DIRECT FROM THE FREEZER. THE LOW TEMPERATURE MAY CAUSE 'FREEZER BURNS' ON LIPS.
DON'T – FREEZE FIZZY DRINKS.
DON'T – TRY TO KEEP FROZEN FOOD WHICH HAS THAWED, IT SHOULD BE EATEN WITHIN 24 HOURS OR COOKED AND REFROZEN.
DON'T – REMOVE ITEMS FROM THE FREEZER WITH WET HANDS.
DON'T – SHUT THE LID WITH FORCE. YOU WILL DAMAGE THE APPLIANCE.

• THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS(INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORYOR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE ANDKNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THEAPPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
• CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEYDO NOT PLAY WITH THE APPLIANCE.
• DO NOT STORE EXPLOSIVE SUBSTANCES SUCH AS AEROSOLCANS WITH A FLAMMABLE PROPELLANT IN THIS APPLIANCE.
• THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLDAND SIMILAR APPLICATIONS SUCH AS STAFF KITCHEN AREAS IN SHOPS, OFFICES AND OTHER WORKING ENVIRONMENT FARM HOUSES AND BY CLIENTS IN HOTELS, MOTELS AND OTHER RESIDENTIAL TYPE ENVIRONMENTS;BED AND BREAKFAST TYPE ENVIRONMENTS CATERING AND SIMILAR NOT-RETAIL APPLICATIONS.
• IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY MANUFACTURE, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.

Diagram of Circuit Principles

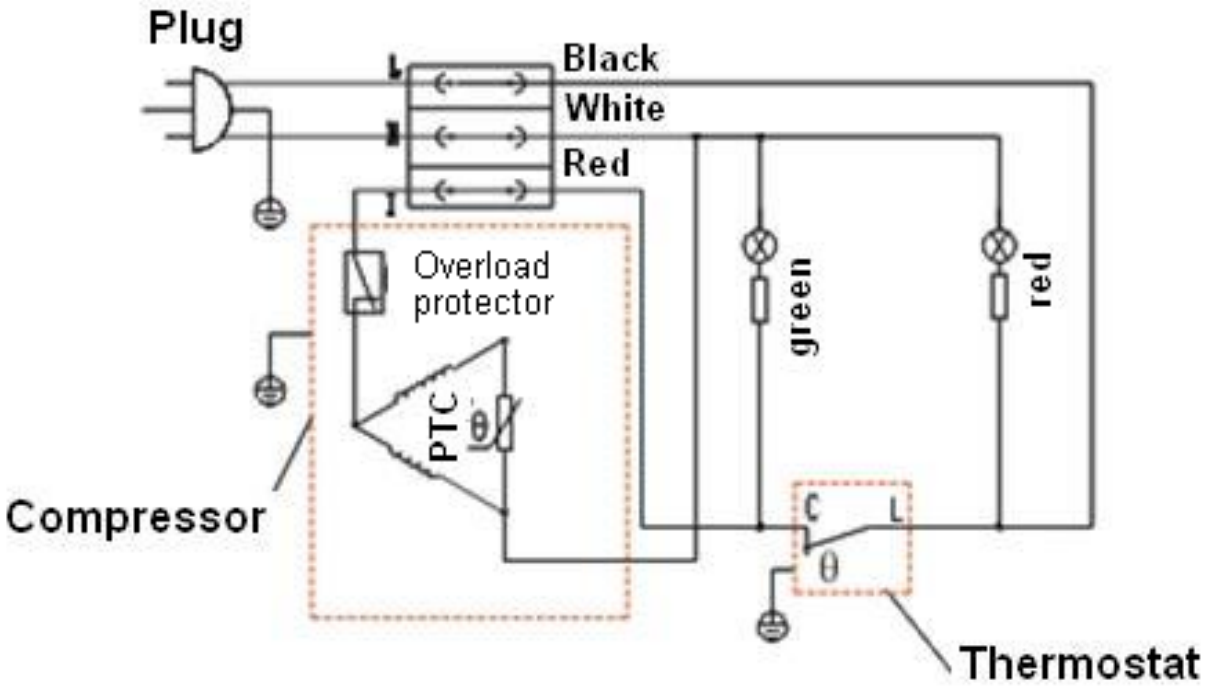

VOLTAGE : AC115V/60HZ
INPUT POWER: 130W
CAPACITY : 200L /7.11CU.FT